


## Cut-to-Size Grommets



*Cut the thin layer of rubber in the center of these grommets to create custom IDs to securely hold and protect wire, cable, and cords. Push these grommets into place. They turn rough-edged and uneven holes into smooth, insulated holes. Commonly used in metal panels, they also damp vibration. Also known as webbed grommets.*

*Physical Diagram:*

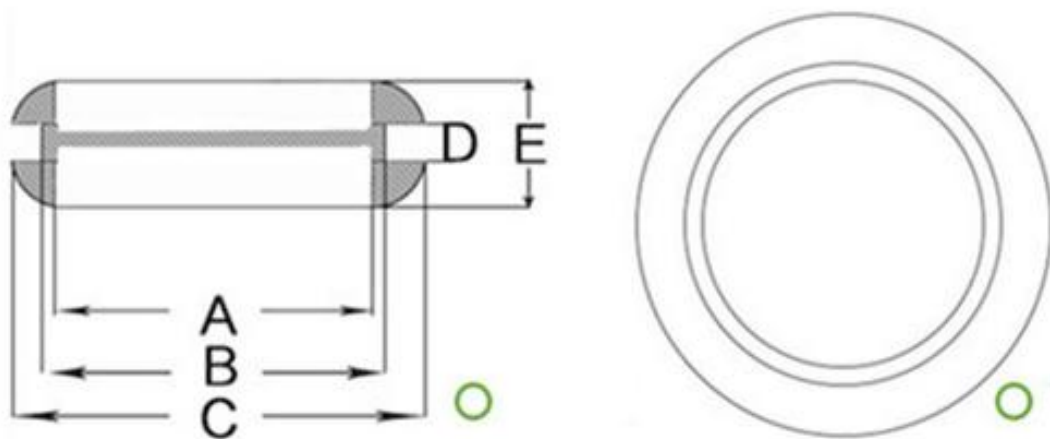

## Specification

**Metric**

*Unit: mm*

Model	Inner Diameter	Hole in Diameter	Outer Diameter	Panel Thickness	Overall Thickness	Package
	A	B	C	D	E	Pack/PCS
14*16	14	16	21	2.5	9	1000PCS
15*20	15	20	26	2	9	500PCS
18*22	18	22	30	3	7	500PCS
22*27	22	27	34	1.6	9	500PCS
25*30	25	30	40	3	10	200PCS
30*35	30	35	40	3	10	200PCS
32*40	32	40	47	3	10	200PCS
42*50	42	50	57	3	11	100PCS
50*60	50	60	66	3	11	100PCS
60*70	60	70	80	3	11	100PCS
70*80	70	80	90	3	10	100PCS
80*90	80	90	100	3	13	50PCS
90*100	90	100	110	4	15	50PCS
100*110	100	110	120	4	15	25PCS
110*120	110	120	130	4	15	25PCS
120*130	120	130	140	4	15	25PCS